

# SINGER®

TRUSTED INTERNATIONAL BRAND

 
## SINGLE TUB

## WASHING MACHINE

### STS602CDA



**6kg**

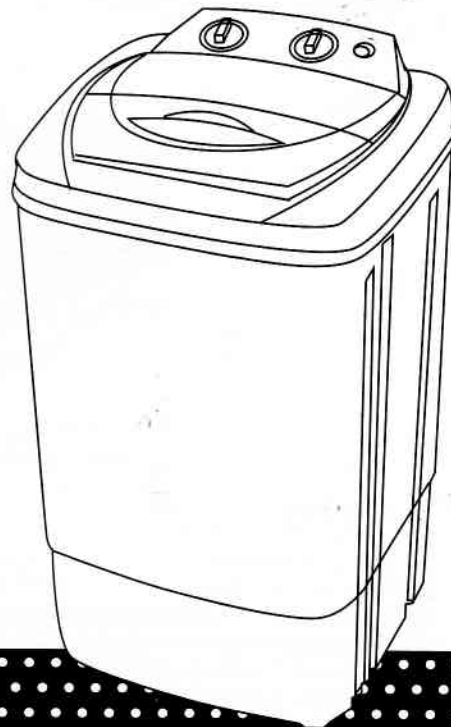


# USER MANUAL

## INTRODUCTION

This Single Tub washing machine is one of the newest types of our company. It has following features:

1. Better current design. When the wheel is running, the current setup a special cycle watercourse and raises immediately. Then it will spray out strongly. At the same time, it shapes a strong current and washes the clothes from different directions.
2. Employing a new type of big and small combination wavy wheel, washing the clothes cleaner.
3. Various washing choices: soft, standard.
4. Plastic cabinet with foldable lid.
 
## MAINPARTS

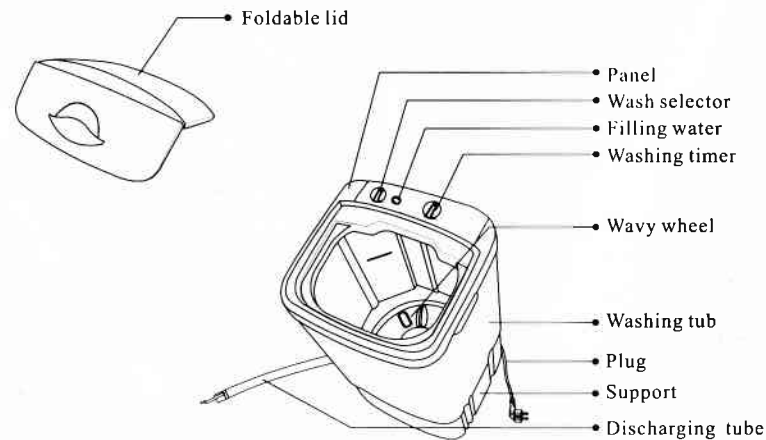

Design may change due to product improvement without prior notice.


## ATTENTION

 - ⊗ Don't set it in bathroom or place where rain comes in easily.
- Well connected to the ground.
- ⚡ Using single socket and forbidden to use multiplied socket together with other appliances.
- ⊗ Choose the correct power, otherwise it may cause fire or electricity shock.
- ⊗ Away from fire sparks to avoid the plastic deform.
- ⊗ All the components inside the machine must not touch water during the maintenance period.
- ⊗ Don't put heavy or hot things on the machine to avoid the plastic parts deform.

➡ Page 1

- ⚡ Please clean the plug if it is dusted or stuck with dirty things in order to avoid causing fire.
- ⊗ You are forbidden to use hot water above 55°C in the tub. Otherwise, the plastic parts deform.
- ⊗ Don't touch the washing clothes with your hand before the machine completely stops.
- ⊗ Don't use the plug when it is in disrepair, otherwise it may cause fire or electric shock.
- ⊗ Must not put clothes in which are just cleaned with organic vaporizing solvents, such as gas, alcohol.
- ⚡ When pulling the plug out, you should not pull the wire in order to avoid the possibility of electric shock or causing fire.
- ⚡ Must pull out the plug when you are away from home for a long time or you are repairing the machine. Also, please don't pull out the plug by wet hand to avoid electric shock.

## CIRCUIT DIAGRAM

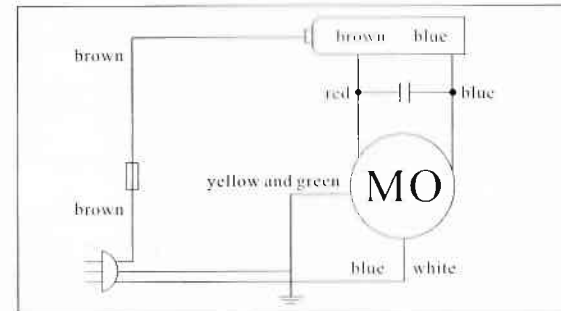

## INSTRUCTIONS FOR OPERATION

### WASHING ORDERS:

1. The socket must be grounded.
2. Lay down the discharging tube to assure good discharging.
3. Insert the plug into the socket.
4. Connect the water introducing tube: insert the introducing water elbow into the water gate on the washing machine until you hear the click.

### ➡ washing

 
#### ➡ 1. washing



#### ➡ 2. half-way drain



#### ➡ 3. cleaning



### ➡ Ending

1. Discharging water completely.

➡ Page 2

 
- 2.Pull the plug out of the socket.
- 3.Open the lid and dry the tub in the air.

### WASHING.

- 1.Filling water  
Fill water to the expected water level.
- 2.Putting in washing powder and selecting washing time.For the detailed information, please refer to the guide for customers.
- 3.Putting in washing clothes:The clothes put into the tub would decrease the water level. Add more water if necessary.
- 4.Selecting water flow:Select corresponding water flow.As for details,please refer to the guide for customers.
- 5.After the washing ends,discharge water.

### Attention

- 1.If there has excess amount of water in the tub, it would spill out of the tub.
- 2.In order to prevent damage or deforming of washings,better to tie up some long washings, such as skirts or pull up all zippers.
- 3.Pretreating method just as the figure shown.
- 4.All pockets should be empty,take coins,keys, etc out of them.
- 5.Hairy balls,collars should be turned inside.
- 6.Fast color washings should be washed separately.

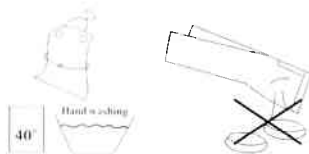

## GUIDE FOR CUSTOMERS

### 1.THE STANDARD OF WASHING TIME:

#### Washing time:

Washing Capacity	Water Level	Water Flow	Washings	Washing Time
6kg~ 2.4kg	Standard	Middle(40L) High(48L)	Chemical fiber	4-6mins
			Kapok,hemp	8-11mins
			Very dirty washings	12-15mins
			Bed sheets	9-13mins
Below 2.4kg	Soft	Middle(40L) Low(36L)	Thin chemical fiber	3-4mins
			Chemical fiber	4-6mins
			Kapok,hemp	9-11mins

### 2.NORMAL AGENT AMOUNT USED FOR WASHING

Washing Capacity	Water Level	Normal	
		Condensed One	Normal One
Above3.6kg	High(48L)	36g	57g
3.6kg-2.0kg	Middle(40L)	30g	48g
Below2.0kg	Low(36L)	25g	40g

- ※ Different class of washing,different selection of corresponding washing agent.  
Please don't use excessive amount of washing agent.It would cause waste and affect

washing effect.

### 3.AGENT USED FOR WOOLEN SWEATER.

Washing amount	Water Level (volume)	Normal amount	
		Condensed	Normal
Above3.6kg	High(48L)	10ml	29ml
3.6kg-2.0kg	Middle(40L)	8ml	24ml
Below2.0kg	Low(36L)	7ml	20ml

- 1.Correctly select the volume of agent,please refer to the list.
- 2.Method:please use it according to the method of washing soft articles.
- 3.When wash the fine woolen fabric,please select the special agent.

### WASHING POWDER

Directly dissolve the washing powder.

- 1.Put in washing powder when the water level is low.
- 2.Turn the switch to the position of standard.
- 3.Start the machine and stir the water for 1 min.
- 4.After the washing powder dissolves,put in washings and introduce water to expected level.
- 5.Select correct washing time.

## WASHING METHOD FOR WOOLEN FABRIC

For fine woolen fabric,such as pure rabbit hairs and wool,don't wash them directly in the tub.

- 1.Select water level for introducing water:put warm water of 30°C and select proper water level.
- 2.Putting in washing agent:please refer to washing agent for woolen fabric.In order not to damage the fabric of pure animal hairs,please use neutral washing agent without ferment.
- 3.Putting in washings:woolen washings should be put inside a washing net bag and washed on their reverse sides.
- 4.Washing:wash them with weak water flow for 2mins, then introduce water to rinse them for 2mins.Take them out,flatten them and keep them in good shape.Don't dry them under the sun.

Washing Capacity	Water level	Water flow
Below2.0kg	Middle	Soft
Below1.0kg	Low	



## METHOD FOR WOOLEN BLANKET


Washing pure woolen blanket and electric blanket are absolutely forbidden.

- 1.Fold the blanket four times in upright direction,then roll it up and put it into the net bag.
- 2.Put the blanket into the washing tub and press it lightly with hand so as to make it full of water and sink to the bottom.
- 3.According to the weight and volume of the blanket,adjust the water level.
- 4.Select washing time and start washing.Sometimes the washings would make water

inside the tub spilling out. It is better to cover the tub with the lid.

## MAINTENANCE

1. Please pull the plug out of the socket (don't touch the socket when your hands are wet) and put it at the correct position.
2. After discharging the water in the tub, please turn the switch from discharge to standard.
3. Pick up the water introducing tube and hang the discharging tube.
4. Clean the housing of the machine, wipe it thoroughly, and wipe out the dirt with chemicals, such as alcohol, window cleaner, etc. When it is very dirty, please use neutral liquid soap to clean.
5. Never misuse the machine, follow as specified on the label.
6. Keep the machine away from direct sunlight and heating appliances.
7. Always place the machine at a covered area.

 Water is not allowed to enter the inner part of the machine directly. Otherwise, the electric motor will be conducted by electricity and causing electric shock.

## PACKING LIST

NO.	Name	Unit	QTY
1	Washing machine	Set	1
2	Introducing water tube	Piece	1
3	Operating instruction manual	Copy	1